

 MITSUBISHI

black
DIAMOND



CCD COLOR CAMERA

BDC4803VF

USER MANUAL



CONTENTS

-	PRECAUTIONS.....	Page 3
-	PACKING CONTENTS.....	Page 4
-	<u>1. User Manual</u>.....	Page 4
-	<u>2. Camera</u>.....	Page 4
-	FEATURES AND FUNCTIONS.....	Page 5
-	INSTALLATION.....	Page 6
-	<u>1. Power connection</u>.....	Page 6
-	<u>2. Video cable</u>.....	Page 7
-	<u>3. View angle and focus Adjustment</u>.....	Page 8
-	<u>4. Operating controls and functions</u>.....	Page 9
-	SPECIFICATIONS.....	Page 10
-	ADDRESS.....	Page 11

PRECAUTIONS

1. **Do not attempt to disassemble the camera.**

There are no user serviceable parts inside. Ask a qualified service person for servicing

2. **Handle the camera with care.**

Do not mishandle the camera. Avoid striking, shaking, etc. Improper handling or storage could damage the camera.

3. **Do not expose the camera to rain or moisture, or try to operate it in wet areas.**

Turn the power off immediately and ask a qualified service person for servicing. Moisture can damage the camera.

4. **Do not use strong or abrasive detergents when cleaning the camera body.**

Use a dry cloth to clean the camera when dirty. In case the dirt is hard to remove, use a mild detergent and wipe gently. Afterwards, wipe off the remaining part of the detergent with a dry cloth.

5. **Clean the Objective faceplate with care.**

Do not clean the Objective with strong or abrasive detergents. Use lens tissue or a cotton tipped applicator and ethanol.

6. **Never face the camera towards the sun. Do not aim the camera at bright objects.**

Whether the camera is in use or not, never aim it at the sun or other extremely bright objects. Otherwise, blooming or smear may be caused.


7. **Do not operate the camera beyond the specified temperature, humidity or power source ratings.**

Use the camera in conditions where temperature is between $-10\text{ }^{\circ}\text{C} \sim +50\text{ }^{\circ}\text{C}$, humidity is below 80% without moisture and the power source is DC 12 V ($\pm 10\%$).

PACKING CONTENTS

1. Usermanual

2. Camera

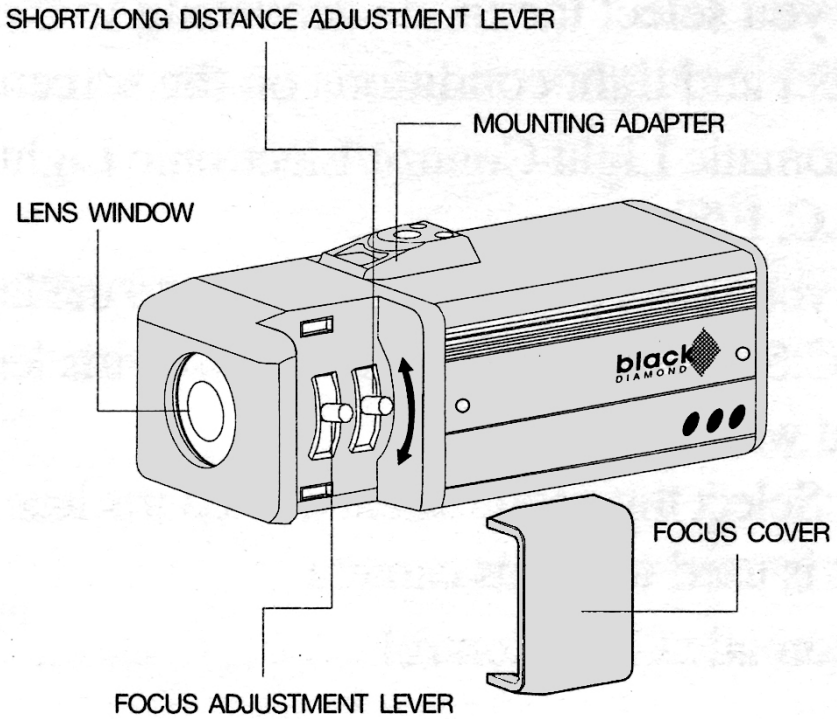


FEATURES AND FUNCTIONS

- Auto Light Control (ALC) function
- Electronic Light Control (ELC) function
- Automatic Gain Control (AGC) function
- Automatic Tracing White Balance (ATW) function
- Internal Synchronisation
- Minimum Illumination of 1 Lux @ F2.0
- Signal to noise ratio > 45 dB (AGC off)
- Horizontal resolution of 480 TV lines.
- OLPF Built in
Unlike usual cameras, this camera filters unnecessary noise signals in dark view and transmits them with more clear picture signals. This makes it possible to eliminate unpleasant dark noises in low lux conditions and ensures an extraordinary clear picture in any light condition.

INSTALLATION

1. Power connection

Connect the DC 12V powercable with the DC 12V Terminal.

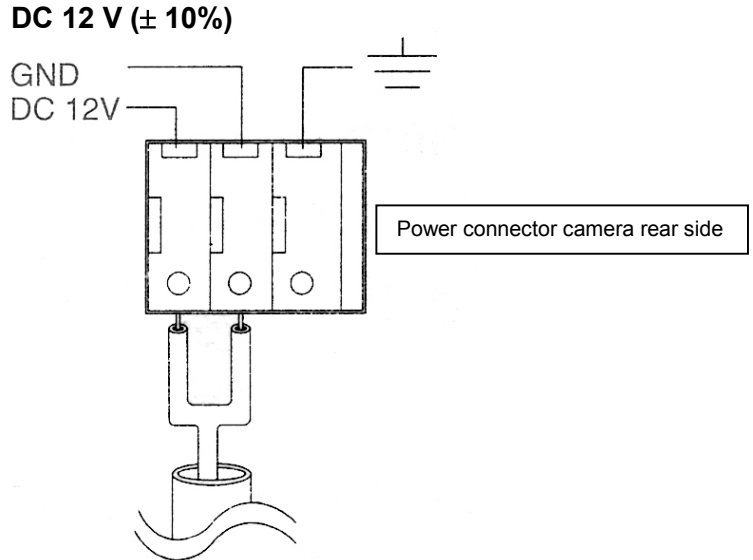

● Resistance of copper wire (at 20 °C)

Copper wire size	0,22 mm ²	0,33 mm ²	0,52 mm ²	0,83 mm ²
Ω / m	0,078	0,05	0,03	0,018

● Calculation of max. cable length between camera and power supply:

$$10,5V \text{ DC} \leq V - (R \times 0,42 \times L) \leq 16V \text{ DC}$$

L : Cable length (m)

R : Resistance of copper wire (Ω / m)

V : DC output voltage of power supply (V DC)


$$L \text{ standard} = V - 12 / 0,42 \times R$$

$$L \text{ min.} = V - 16 / 0,42 \times R$$

$$L \text{ max.} = V - 10,5 / 0,42 \times R$$

2. Video cable

- It is recommended to use a monitor with a resolution at least equal to that of the camera.

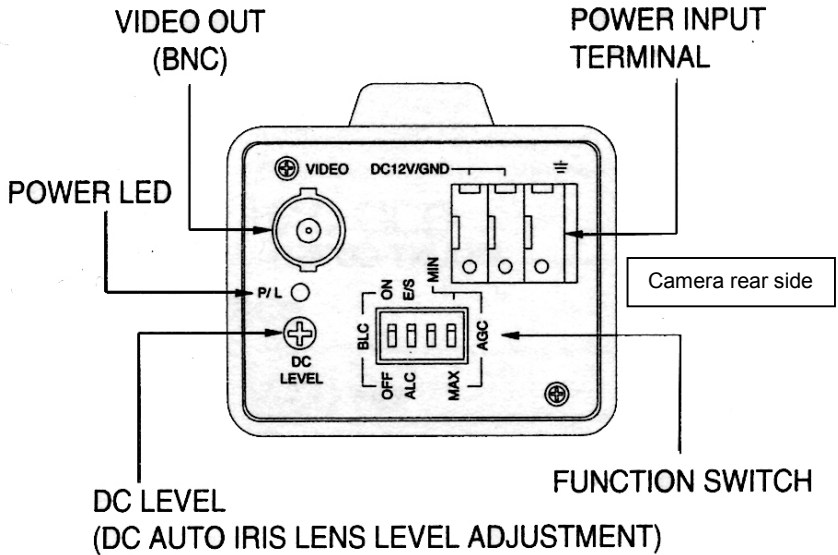


Caution: Fixed ALC mode. (Built-in DC Auto iris Varifocal lens)

- The max. extensible coaxial cable length between camera and the monitor is shown below.

Coax cable type	RG-59/U (3C-2V)	RG-6U (5C-2V)	RG-11/U (7C-2V)	RG-15/U (10C-2V)
Recommended max. cable length (m)	250	500	600	800

3. View angle and focus Adjustment

Push and slide upward to open the lens cover .

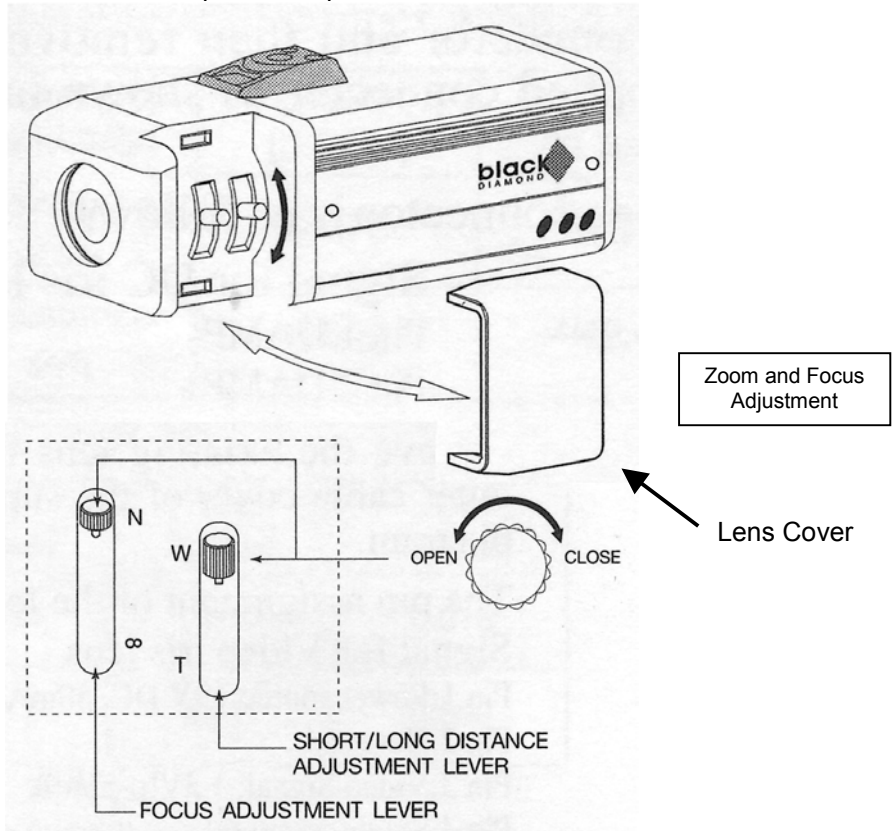

To adjust focus and the viewing angle (Zoom) you have to loosen the adjustment lever by turning left, afterwards you can slide the adjustment lever up and down.

Adjust at first the viewing angle and afterwards the focus to get a sharp picture.

After adjustment fix the adjustment lever by turning right.

Min. – max. viewing angle

	Max. W (Wide)	Max. T (Tele)
	4 mm	8 mm
Horizontal	70,1°	35,3°
Vertical	11,6°	26,5°

4. Operating controls and functions

Function switch on the back (see page: 7)

S/W	Function	ON	OFF
1	BLC	ON	OFF
2	ALC	E/S	ALC
3	---	---	---
4	AGC	MIN	MAX

S/W 1 Back Light Compensation Mode Selector
(BLC ON, OFF)

Lets you select the mode according to the position of the object and light conditions on the screen.

S/W 2 Automatic Light Control / Electronic Light Control Selector
(ALC; E/S)

Lets you select the mode according to the lens type used.

ALC: Select this mode when an auto iris lens (ALC lens) is used with this camera.

E/S: Select this mode when a fixed iris lens or manual iris lens is used with this camera.

S/W 3 Not Used / No Function

S/W 4 Automatic Gain Control

DC Level DC Auto Iris Lens Level Adjustment (see page: 7).

Adjust under normal light conditions the DC Level with a fine screw driver to the best picture performance.

SPECIFICATION

Model Name	BDC4803VF
Signal Standard	PAL
Objective	f : 4 – 8 mm
CCD – Chip	1/3" Super HAD CCD
Scanning System	2:1 Interlaced
Scanning Frequency	H: 15.625 kHz V: 50 Hz
Total Pixels	795 (H) x 596 (V) app. 470.000 Pixel
Effective Pixels	752 (H) x 582 (V) app. 440.000 Pixel
Horizontal Resolution	480 Lines
Electronic Shutter	1/50 – 1/1000000 auto
S/N Ratio	> 45 dB (AGC off)
Sensitivity	1.0 Lux @ F 2.0
Sync System	Internal Sync
Automatic Iris Control	Yes, DC controlled
White Balance	Automatic
Function	BLC, ALC, AGC, OLPF
Video Output	1 Vpp 75 Ω unbalanced
Power Source	DC 12 V (\pm 10 %)
Power Consumption	max. 180 mA (2,2 W)
Operating Temperature	-10 °C ~ +50 °C
Operating Humidity	max. 80 % without dew
Dimensions (W x H x D mm) (without connectors)	53 x 42 x 120 mm
Weight	320 g
Approvals	CE EN 55022 EN 55024 EN 61000



Electronic Visual Systems

MITSUBISHI ELECTRIC EUROPE B.V.

Gothaer Strasse 8 40880 Ratingen Postfach 1548 40835 Ratingen Germany
Telefon +49 (2102) 486 - 9250 Telefax +49 (2102) 486 - 7320

(Technical specifications subject to change. No liability will be assumed for printing errors or other errors.)